

BLENDER 180Z ROCKET



FitRx

Blend on the go!


Powerful and durable, the FitRx ROCKET Portable Blender makes the smoothest smoothies, shakes, and frozen drinks in seconds. Six stainless steel blades quickly grind small ice cubes and blend frozen fruits, vegetables, and protein powders. Featuring a simple one-button operation, this blender is quick and easy to use. With 18oz. capacity, this portable blender is all you need to get your shake or smoothie fix on the go.

Follow These Simple Steps To Start:

1. Fully charge the unit for 3 hours prior to use. The Power button will glow red while it is charging, and glow green once it is fully charged. Clean all parts thoroughly prior to use. Max runtime on a full charge is 10 minutes.
 2. Install the cup onto the motor base, making sure it is securely in place.
 3. Add your ingredients to the cup. Secure the lid onto the cup.
 4. Press and hold the Power button for 1 second, and the unit will start working. The Power button will glow white while the unit is working. The unit will stop automatically after 30 seconds, and the Power button will stop glowing. Blend until your ingredients are fully mixed.
 5. Double press the Power button to switch to ice grinding mode. The unit will run 10-second per cycle, operate for 3 cycles, with a 3-second interval between each cycle.
 6. Press the Power button at any time during the blending process to stop the unit.
- NOTE:** Add more liquid to the blender if your smoothie or shake is too thick.



**Add Your Ingredients
And Get Ready to Blend!**

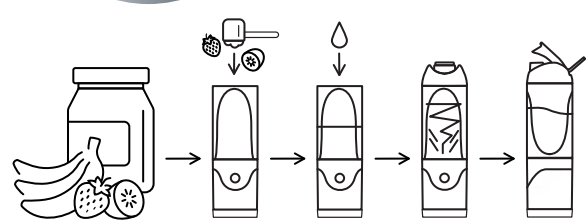

Auto shut-off after 30 seconds

DO NOT start blending without adding ingredients or placing the lid on the blender. **DO NOT** fill the blender past the 18oz. line.

Product Overview

ROCKET Portable Blender Quick Assembly
Please read this user guide in its entirety prior to using the blender.

**Made with TRITAN®: Shatter-resistant
BPA-free plastic**

- 1 Leakproof Lid
- 2 18oz cup with measurement lines
- 3 Travel Cap
- 4 Motor base with charging port
- 5 USB-C Charging Cable



Power Button LED Indicator Functions



OFF



ON



CHARGING




FULLY CHARGED



Cleaning & Care

Once you're done blending and have emptied the blender of your smoothie or shake, remove the cup from the motor base. Make sure the blender is OFF and unplugged before cleaning it.

- 1 Fill the cup with water, just past the halfway mark.
- 2 Add a drop of dishwashing soap to the cup.
- 3 Secure the lid on top of the blender. Press the Power button to blend for 30 seconds, then rinse the cup with water.
- 4 Take the blender off the base and empty it.
- 5 Use a sponge to clean the lid. Only wash the blades by hand, and wipe the base clean with a damp cloth. Dry with a soft cloth or let it air-dry.

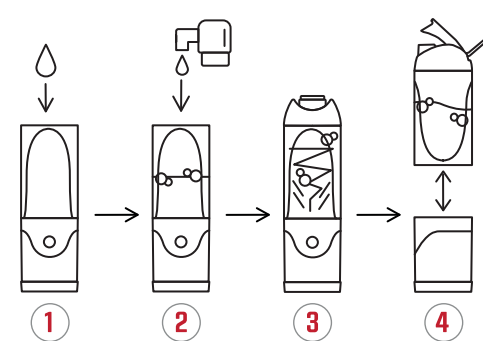

NOTE: For the best results, fully charge the blender before use. Max charging time is 3 hours. Clean before first use.

FCC PART 15

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - a. Reorient or relocate the receiving antenna.
 - b. Increase the separation between the equipment and receiver.
 - c. Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
 - d. Consult the dealer or an experienced radio/TV technician for help.
- The device has been evaluated and found to meet the general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

Customer Support

If you have any other questions or issues regarding product use and/or care, please contact tzumi Technical Support at: support@tzumi.com or 1-855-60-TZUMI.



X ROCKET



The manual can be downloaded via QR CODE.

FOR HOUSEHOLD AND INDOOR USE ONLY.

FitRx

Designed in the U.S.A by Team FitRx®

FitRx® ROCKET Blender, ITEM NO. 9497, Distributed by FitRx®, NY, NY 10016.
©Copyright 2024 FitRx. All Rights Reserved.
Made in China.

Technical Specifications:
Model: 9497 Input: 5V ~ 2A Power: 150W Battery: 7.4V ~ 2000mAh



Important Safeguards

When using electronic appliances, basic safety precautions should always be followed. Read instructions before using:

- To protect against the risk of electric shock, do not put this unit in water or any other liquid.
- This appliance is not intended to be used by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed on how to operate the unit by a person responsible for their safety. Close supervision is necessary whenever an appliance is used by or near children. Children should be supervised to ensure that they do not play with the unit.
- **Always** turn the unit OFF and unplug it from the outlet when it is not in use, before assembling, disassembling, cleaning and changing accessories or approaching parts that move in use. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
- **DO NOT** touch any moving parts. Do not attempt to defeat any safety interlocking mechanisms.
- **DO NOT** let the charging cord hang over the edges of tables and counters.
- **DO NOT** let the charging cord come in contact with hot surfaces, including the stove.
- Keep all hands and utensils out of the blender while blending to reduce the risk of severe personal injury and damage to the unit. A scraper may be used, but only when the blender is OFF.
- **The blades are sharp. Handle carefully.**
- To reduce the risk of injury, never place the blades on the base without the jar being properly installed.
- **DO NOT** incinerate this unit even if it is severely damaged. The batteries can explode in a fire.
- Please use the proper USB supply connection, and do not use unapproved power sources. Doing so may damage the unit.
- For the best results, use the recommended serving amounts as indicated on the manufacturer's label.
- **DO NOT** fill the blender past the 18oz. marker.
- **ONLY** use this blender on a hard, level surface.
- **DO NOT** attempt to sharpen or touch the blades.
- **DO NOT** use this blender with wet hands.

- This device is recommended to be used by adults only.
- **DO NOT** expose the motor base to water. Doing so may cause the blender to short circuit.
- **DO NOT** use the blender in direct sunlight or near an open flame.
- Exposure to high temperatures may cause the blender to overheat or explode.
- This blender is for household and indoor use only.
- Keep this blender away from flammable objects or substances.
- **DO NOT** use the charging cable if it is wet, frayed, or damaged.
- If this blender malfunctions, do not try to repair it yourself. Take it to a qualified technician instead.
- **ONLY** use the blender with the lid attached.
- Keep your hands, hair, and items of clothing out of the blender while adding ingredients.
- **DO NOT** operate the blender when it is empty.
- **ONLY** use the provided accessories with this blender. The use of attachments, including canning jars, not recommended by the manufacturer may pose a serious risk of personal injury.

CAUTION:

- Ensure that the blender is OFF and unplugged before disassembling removing it.
- This unit must only be supplied by low voltage corresponding to the marking on the unit.
- This unit contains batteries that are non-replaceable.
- If the unit is to be stored for a long period of time, the batteries should be removed.
- The supply terminals are not to be short-circuited.

SAVE THESE INSTRUCTIONS

Battery Disposal

This product includes a built-in rechargeable lithium battery. Please dispose of this product properly. Check your local or state laws for proper disposal procedures.

WARNING: DO NOT BLEND HOT, WARM, OR CARBONATED INGREDIENTS. BE CAREFUL IF HOT LIQUID IS POURED INTO THE FOOD PROCESSOR OR BLENDER AS IT CAN BE EJECTED OUT OF THE APPLIANCE DUE TO A SUDDEN STEAMING

WARNING: Keep away from children. This product contains sharp blades.