



Important Safeguards

When using this mixer, basic safety precautions should always be followed, including the following:

- For the best results, use the recommended serving amounts as indicated on the manufacturer's label.
- Do not fill the mixer past the 24 oz. marker.
- Only operate this mixer on a hard, level surface.
- Do not attempt to sharpen or touch the 3D blades.
- Do not use this mixer with wet hands.
- This unit is recommended to be used by adults only.
- Do not expose the motor base to water. Doing so may cause the mixer to short circuit.
- Do not use the mixer in direct sunlight or near an open flame.
- Exposure to high temperatures may cause the mixer to overheat or explode.
- This mixer is for household use only.
- Keep this mixer away from flammable objects and substances.
- Do not use the charging cable if it is wet, frayed, or damaged.
- If this mixer malfunctions, do not try to repair it yourself. Take it to a qualified technician instead.
- Only use the mixer with the lid securely on.
- Keep your hands, hair, and items of clothing out of the bottle when adding ingredients to the mixer.
- Do not operate the mixer when it is empty.
- Only use the provided accessories with this mixer.
- Make sure the mixer is powered off while setting it up or cleaning it.

Battery Disposal

This product includes a built-in rechargeable lithium-polymer battery. Please dispose of properly. Check your local or state laws for the proper disposal procedures.

WARNING: DO NOT MIX HOT, WARM, OR CARBONATED INGREDIENTS.
WARNING: Keep away from children.



Get ready for the FitRx workout experience!



FitRx® SPORT MIXER, ITEM NO. 9498. Distributed by FitRx®, NY, NY 10016.
©Copyright 2024 FitRx. All Rights Reserved.
Made in China.

Technical Specifications:
Model: 9498 Input: 5V/1A Power: 2W Battery: 3.7V/700mAh



SPORT MIXER
24OZ

Powerful
HydroTek
Mixing



FitRx

The mixer that's as active as you are!


Powerful and durable, the FitRx SPORT MIXER makes the perfect protein shakes in seconds. Its 3D whisking blades quickly mix almost any powder, while the leakproof lid ensures that you will never have to deal with any spills. Its simple one-button operation makes using it a breeze. With 24 oz. capacity, this portable mixer whips up smooth, clump-free protein shakes every time.

Follow These Simple Steps To Start:

1. Fully charge the mixer for 80 minutes prior to use. Clean it thoroughly and ensure that all parts are dry. Max runtime on a full charge is 40 minutes.
2. Place the cup on the motor base, making sure it is securely attached.
3. Add water, milk, or another liquid to the cup, up to the 12 oz. line.
4. Press the Power button to start mixing.
5. Add your desired powder from the storage capsule.
6. Close the lid and mix until the desired consistency is achieved.
7. Once the unit is done mixing, press the Power button again to turn it off. The mixer will not stop automatically.

NOTE: Add more liquid if your shake is too thick.

Time To Mix Your Special Fix!

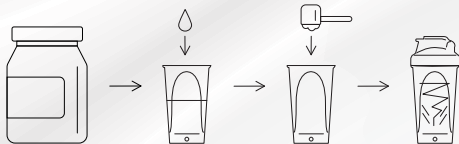

Product Overview

Made with **TRITAN**
Shatter-resistant
BPA-free plastic


- 1 Leakproof Lid with folding hook
- 2 Storage Capsule
- 3 24 oz. cup with measurement lines
- 4 Motor Base with Charging Port
- 5 USB-C Charging Cable



Cleaning & Care

Once you're done mixing and have drunk your shake, remove the cup from the motor base. Make sure the mixer is unplugged before cleaning it.

- 1 Fill the cup with water, just past the halfway mark.
- 2 Add a drop of dishwashing soap.
- 3 Secure the lid on top of the mixer. Press the Power button and mix for 20-30 seconds, then rinse the cup with water.
- 4 Take the cup off the motor base.
- 5 Use a sponge to clean the lid. Only wash the 3D blades by hand, and wipe the base clean with a damp cloth. Dry with a soft cloth or let it air-dry.

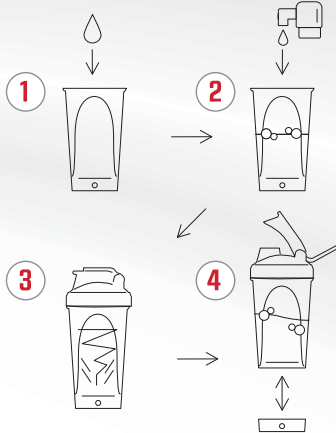

NOTE: For the best results, fully charge the mixer before using it. Max charging time is 80 minutes. Clean it thoroughly before first use.